

# ROBO-8700VL

Full-Size Socket 478 Pentium 4  
Intel 845 SBC Card

## User's Manual

P/N : 011115080008 Version 1.0

**Copyright Portwell, Inc., All rights reserved.**  
**All other brand names are registered trademarks of their respective owners.**

## **Acknowledgments**

Award is a registered trademark of Award Software International, Inc.  
PS/2 is a trademark of International Business Machines Corporation.  
Intel and Pentium 4 are registered trademarks of Intel Corporation.  
Microsoft Windows is a registered trademark of Microsoft Corporation.  
Winbond is a registered trademark of Winbond Electronics Corporation.  
All other product names or trademarks are properties of their respective owners.

# Table of Contents

## How to Use This Manual

### Chapter 1. Introduction

1-1 Product Description.....	1-1
1-2 Checklist.....	1-2
1-3 Specification.....	1-3
1-4 Board Dimensions.....	1-4

### Chapter 2. Hardware Configuration Setting

2-1 Jumpers.....	2-1
2-2 Connectors.....	2-5

### Chapter 3. Installations

3-1 Installing the CPU.....	3-1
3-2 ATX power Installation.....	3-2
3-3 MicroPCI Daughter Card Installation.....	3-3
3-4 Installation of the Memory (DIMM).....	3-4

### Chapter 4. BIOS Setup Information

4-1 BIOS Introduction.....	4-1
4-2 BIOS Setup.....	4-1
4-3 Standard CMOS Setup.....	4-3
4-4 Advanced BIOS Features.....	4-6
4-5 Advanced Chipset Features.....	4-9
4-6 Integrated Peripherals.....	4-12
4-7 Power Management Setup.....	4-15
4-8 PNP/PCI Configurations.....	4-17
4-9 PC Health Status.....	4-18
4-10 Frequency/Voltage Control.....	4-19
4-11 Load Fail-Safe Defaults.....	4-20
4-12 Load Setup Defaults.....	4-20
4-13 Set Supervisor/User Password.....	4-20
4-14 Save & Exit Setup.....	4-20
4-15 Exit Without Saving.....	4-20

### Chapter 5. Driver Installation

5-1 Intel Software Installation Utility.....	5-1
5-2 Intel Ultra ATA Storage Driver.....	5-4
5-3 Windows 98 Drivers Installation.....	5-7
ATI M6 VGA Driver Installation.....	5-7
SigmaTel AC97 Audio Drivers.....	5-10
PCI Ethernet Drivers.....	5-13
5-4 Windows NT 4.0 Drivers Installation.....	5-14
ATI M6 VGA Driver Installation.....	5-14
SigmaTel AC97 Audio Drivers.....	5-15
PCI Ethernet Drivers.....	5-17
5-5 Windows 2000 Drivers Installation.....	5-18

---

ATI M6 VGA Driver Installation.....	5-18
SigmaTel AC97 Audio Drivers.....	5-18
PCI Ethernet Drivers.....	5-21

**Appendix**

A. I/O Port Address Map.....	A-1
B. Interrupt Request Lines (IRQ).....	A-2